



the Ultimate
Wood Repair
system

Rhino-PreTreat INSTRUCTIONS

Before use thoroughly prep areas to be repaired and apply Rhino Wood Repair Rhino-PreTreat (sold separately).


Surfaces must be clean, dry, free of loose debris, contaminants, oil, grease, old paint and other dirt.

For best results apply at temperatures above 13°C (55°F).


Can be used for indoor or outdoor repairs.

ALWAYS WEAR PROTECTIVE GLOVES.

- 1** Identify problem area to be repaired.

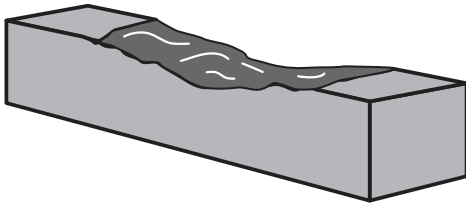

- 2** Clean out and remove rotten wood. Dry brush or blow away all debris.

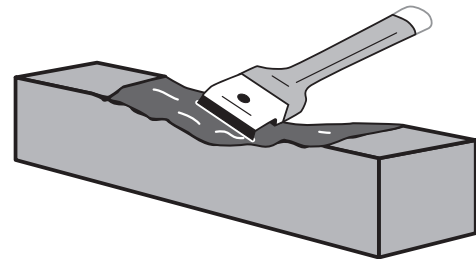

- 3** Spray on Rhino-PreTreat. Brush in if required. Wait 1 hour.



- 4** Spray and/or brush again. Ensure damaged area is totally wet.



- 5** Wait until area is completely dry. See “easy to use instructions” for complete directions of the application of liquid and putty to complete the repair.

For more information please see:

www.rhinowoodrepair.com

Manufactured by Stellchem Inc.
Breslau, ON, Canada
ISO 9001/2000 Registered

STELLCHEM INC
Stick with a Good Idea.