



the Ultimate  
Wood Repair  
system

# Bio-Treat™ INSTRUCTIONS


Before use thoroughly prep areas to be repaired and apply **Rhino Wood Repair Bio-Treat™** (sold separately). Surfaces must be clean, dry, free of loose debris, contaminants, oil, grease, old paint and other dirt.

For best results apply at temperatures above 13°C (55°F).


Can be used for repairs inside and outdoors.

**ALWAYS WEAR PROTECTIVE GLOVES**

**1** Identify problem area to be repaired.

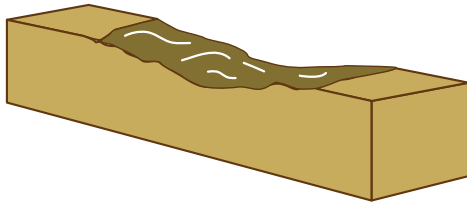

**2** Clean out and remove rotten wood.  
Dry brush or blow away all debris.

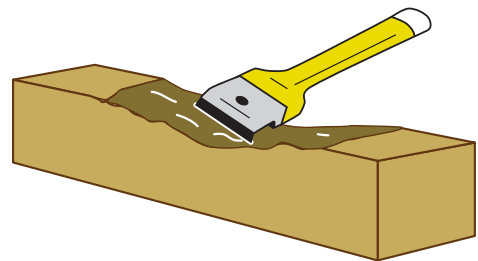

**3** Spray on Bio-Treat. Brush in if required.  
**WAIT 1 HOUR.**



**4** Spray and/or brush again.  
Ensure damaged area is totally wet.



**5** Wait until area is completely dry. See "Easy to Use Instructions" for complete directions of the application of liquid and putty to complete the repair.

For more information please see:

[www.rhinowoodrepair.com](http://www.rhinowoodrepair.com)

Manufactured by Stellchem Inc.  
Breslau, ON Canada

ISO 9001/2000 Registered

**STELLCHEM** INC.

Stick with a Good Idea.